


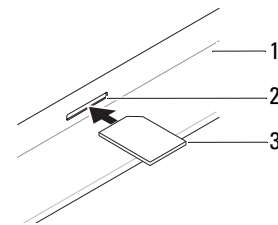
Installing the SIM Card

Subscriber Identity Module (SIM) cards identify users uniquely through an International Mobile Subscriber Identity.


 **NOTE:** Only GSM (HSDPA) type cards need a SIM.

- 1 Shut down your computer and turn the computer over.
- 2 Slide the battery release latches towards the outer edges.
- 3 Slide the battery out of the battery bay.
- 4 In the battery bay, insert the SIM into the SIM card slot.

To remove the SIM card, push the SIM towards the SIM card slot and pull it out.



- 1 battery bay 2 SIM card slot
3 SIM card

 
 
 
 **CAUTION:** To avoid damage to the computer, use only the battery designed for this particular Dell™ computer. Do not use batteries designed for other Dell computers.

February 2009



0H740RA00

DELL™



Information in this document is subject to change without notice.
© 2009 Dell Inc. All rights reserved. Printed in China. Printed on
Recycled Paper.

Reproduction of these materials in any manner whatsoever without
the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell* and the *DELL* logo are trademarks of
Dell Inc.

Other trademarks and trade names may be used in this document to
refer to either the entities claiming the marks and names or their
products. Dell Inc. disclaims any proprietary interest in trademarks
and trade names other than its own.

